

NW6000-7001 QIG

1. Overview


NW6000-7001 DNV GL Managed Industrial Ethernet Switch is designed for harsh environments to withstand vibration, shock, free fall and power surges. The switch provides layer 2+ software features required in marine systems and is DNV GL certified. It includes 8-port 10/100Mbps RJ45 downlink, 2-port GbE SFP uplink and supports Modbus TCP communication.

2. Package Checklist

The switch is shipped with the following items*. If any of these are missing or damaged, please contact your customer service representative for assistance.

- The Switch x 1
- DIN-Rail kit x 1
- Console Cable x 1
- Quick Installation Guide x 1

Panel view

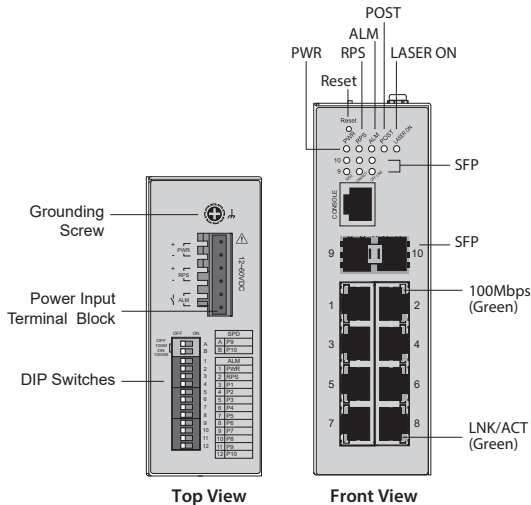

3. Mounting and Dismounting to DIN-Rail



ATTENTION:


The Switch is an open type device and shall be DIN-Rail mounted or wall mounted (optional) in cabinet or enclosure and the ambient temperature should not exceed 70°C (75°C is not certified by UL).

Mounting the switch


Place the switch on the DIN-Rail from above using the slot, push the front of the switch toward the mounting surface until it snaps into place with a click sound.

Dismounting the switch

Press the switch from top and pull out the lower edge of the switch and then remove the switch from the DIN-Rail.

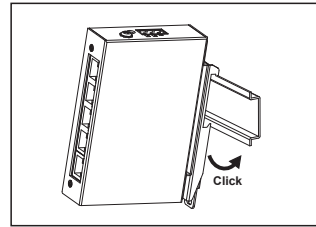

Mounting the Switch

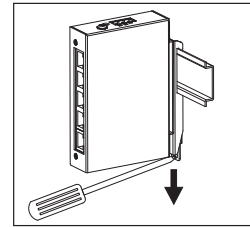

Removing the Switch



ATTENTION:

A corrosion-free mounting rail is advisable. When installing, make sure to allow for enough space between devices to properly install the cabling. And provide ample space for air flow.

4. Grounding the switch

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.



ATTENTION:

This product is intended to be mounted to a well-grounded mounting surface such as a metal panel.

5. Wiring requirements



WARNING:

Safety measures should be taken before connecting the power cable. Turn off the power before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your

power source to make sure that you are using the correct voltage. DO NOT use a voltage greater than what is specified on the product label. Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current exceeds the maximum rating, the wiring can overheat causing serious damage to your equipment.

Please read and follow these guidelines:


- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross make sure the wires are perpendicular at the intersection point.
- NOTE:** Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together
- You should separate input wiring from output wiring
- We advise that you label the wiring to all devices in the system

5.1 Wiring Power Input

5.1.1 The Switch with terminal block

You can use "PWR" for Primary Power input and "RPS" for Redundant Power Input. Check the polarity while connecting.

Top view of Terminal Block is shown in the figure below:

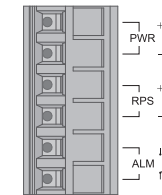

Terminal Block



Caution:

- Use copper conductors only
- Wiring cable temperature should support at least 105°C
- Tighten the wire to a torque value 5lb
- The wire gauge for the terminal block should range between 12~24 AWG

To insert power wire and connect the specified voltage range at a maximum of 1.5A DC power to the power terminal block, follow the steps below:


1. Use a flat-head screwdriver to loosen the wire-clamp screws
2. Insert the negative/positive DC wires into the PWR-/PWR+ terminals, respectively
3. Tighten the wire-clamp screws to prevent the wires from loosening.



ATTENTION:

Please use a power supply from 12~60VDC, the device power shall be supplied by SELV circuit.

5.2 Wiring the relay contact (ALM)

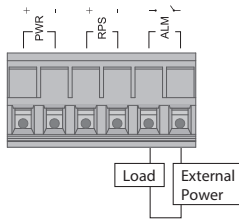

Relay rating: 24V, 1A

The switch has one set of relay alarm output. This relay contact uses two contacts of the terminal block on the switch top panel. The two contacts of the terminal block connector are used to detect user-configured events. The two wires attached to the fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

5.3 Cabling RJ45

Connect one end of an Ethernet cable into the Ethernet port of the switch and the other end to the attached networking device.

- Ports 1-8 supports 10/100/1000Mbps speed
- Ports 9-12 supports 100FX/Gigabit speed
- All the RJ45 ports on the switch support auto-negotiation and auto MDI/MDI-X to eliminate the need for crossover cabling.

* Category 5e cable or above should be used.

6. DIP Switch Setting

OFF	ON		
<input type="checkbox"/>	<input type="checkbox"/>	A	P9
<input type="checkbox"/>	<input type="checkbox"/>	B	P10
<input type="checkbox"/>	<input type="checkbox"/>	1	PWR
<input type="checkbox"/>	<input type="checkbox"/>	2	RPS
<input type="checkbox"/>	<input type="checkbox"/>	3	P1
<input type="checkbox"/>	<input type="checkbox"/>	12	P10

ON: Fiber port 1000Mbps support
OFF: Fiber port 100Mbps support

ON: Primary power alarm reporting is enabled
OFF: Primary power alarm reporting is enabled

ON: Redundant power alarm reporting is enabled
OFF: Redundant power alarm reporting is disabled

ON: Port 9~12 (SFP) link alarm reporting is enabled per dip
OFF: Port 9~12 (SFP) link alarm reporting is disabled per dip

7. LED Indicators

PWR (Green)	Illuminated Off	Primary power on Primary power off or failure
RPS (Green)	Illuminated Off	Redundant power on Redundant power off or failure
ALM (Red)	Illuminated Off	Alarm triggered for abnormal power status and anomalous features. Normal operation or DIP switch OFF

POST (Green)	Illuminated	Switch is ready or running
	Blinking	Self-testing the device when power on
	Off	Switch is not ready
LASER ON (Yellow)	Illuminated	Fiber transceiver is plugged into port 9 or 10
	Off	Both fiber transceivers are not ready on port 9 & 10
100 (Green) (1~8 th RJ45 port)	Illuminated	Link speed at 100Mbps
	Off	Link speed at 10Mbps
LNK/ACT (Green) (1~8 th RJ45 port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed
OFF LINE (Red) (9~10 th Fiber port)	Illuminated	No fiber transceiver insertion
	Off	Fiber transceiver is ready on port
SFP (Green) (9~10 th Fiber port)	Illuminated	Port link-up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed

8. Environmental limits

Operating Temperature	-40°C~75°C (-40°F~167°F)
Storage Temperature	-40°C~85°C (-40°F~185°F)
Ambient relative humidity	5 to 95% (non condensing)



ATTENTION:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.



ATTENTION:

If the equipment is used in a manner not specified by Netwave, the protection provided by the equipment may be impaired.



ATTENTION:

Please leave at least 5cm of space at the left and right of the unit for ventilation.

9. Configuration

Connect through Web Browser:

- Connect your computer to one of the Ethernet ports.
- Use the default IP-address 192.168.100.254 to login to the switch.

Default Username	admin
Default Password	netwave

NOTE: For more details on configuration please refer user manual.

Netwave Systems BV

Blauw-roodlaan 100, 2718 SJ Zoetermeer, The Netherlands.

+31 (0)6 215 021 67 (24/7)

service@seasofsolutions.com